



LFET501-N
1 gang 1 way switch with light



LFET503
2 gang 1 way switch



LFET505-N
3 gang 1 way switch with light



LFET202
Bell push switch



LFET111
1 gang socket



LFET113
2 gang socket



LFET115
3 gang socket



LFET123
1 gang socket + MF socket

LFET502-N
1 gang 2 way switch with light

LFET504
2 gang 2 way switch

LFET506-N
3 gang 2 way switch with light

LFET112
1 gang socket(+ shutter)

LFET114
2 gang socket(+ shutter)

LFET116
3 gang socket(+ shutter)



LFET105
American socket



LFET105/2
2G American socket



LFET105/3
3G American socket



LFET307
1 gang 1 way switch & socket



LFET310
1 gang 1 way switch & American socket



LFET207
Bell push with "do not disturb"
and "clean at once"



LFET302
1 gang satellite socket



LFET301
TV socket



LFET401

2 core Tel socket



LFET403

4 core Tel socket



LFET305

TV socket & 2 core Tel socket



LFET306

TvVsocket & 4 core Tel socket



LFET412

Data socket (AMP)



LFET413

Data socket (AT & T)



LFET520

Air-condition switch



LFET540S

1G dimmer switch



LFET567S

1G small fan switch



LFET5001

1 way



LFET5002

2 way



LFET5151

1 way with light



LFET5152

2 way with light



LFET1091

2 pin socket



LFET1081

2 pin socket(+ shutter)



LFET1441

3 pin socket



LFET1451

3 pin socket(+ shutter)



LFET1461/16A

16A 3 pin socket



LFET1471

MF socket



LFET1101-7

American socket



LFET1101

Satellite socket



LFET1101C

TV socket



LFET1562

2 core Tel socket



ET1564

4 core Tel socket



LFET3026

Data socket



LFET3020
Blank filling component



LFET5807
Fan speed controller



LFET5401
Bell push



LFET5800
Air-condition



LFET530
Audio socket




LFET1201
120 type 1 gang



LFET5615-3
Time lag



LFET1202
120 type 2 gang

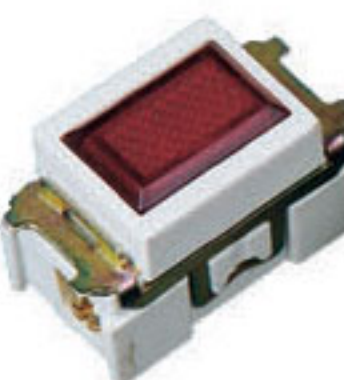

LFET3032
Indicator



LFET1203
120 type 3 gang

LFET3033
Don't disturb

LFET3034
Clean at once



LFET5712-S
Dimmer



LFET6893
120 waterproof cover



LFET5807-S
Fan speed controller



LFET5172-4
Dimmer



LFET6894
120 Mounting box